


- Remove the **ThermaBrick®** Refrigerant Bricks boxes and place in freezer for preconditioning.

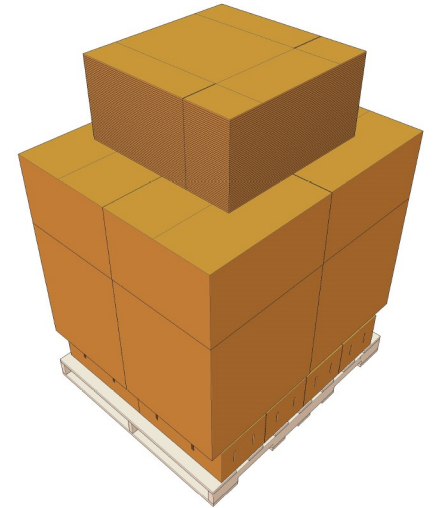

- Remove the knock down shippers and assemble.
- Insert 4 side insulation panels (11.5" w x 12" h). *Figure A.*
- Insert the bottom plug panel (10" x 10") .
- Insert **ThermaBrick®** Brand cooling element / Cheesecake / **ThermaBrick®** Brand cooling element and then top plug (10" x 10"). *Figure B.* (The number or cooling elements required is identified in the table on the product data sheet.)
- Adhere the tab to the top insulation plug for easy removal upon receiving.



Figure A



Figure B