

- Remove the **ThermaBrick®** Refrigerant Bricks boxes and place in freezer for preconditioning.



- Remove the knock down shippers and assemble.
- If using FedEx® or USPS®, follow instructions to assemble.
- Insert C shaped insulation panel A. *Figure A*
- Insert C shaped insulation panel B. *Figure A*
- Insert **ThermaBrick®** Brand cooling element / Chocolate / **ThermaBrick®** Brand cooling element and then fold over the panel. *Figure B.* (The number or cooling elements required is identified in the table on the product data sheet.)



Figure A

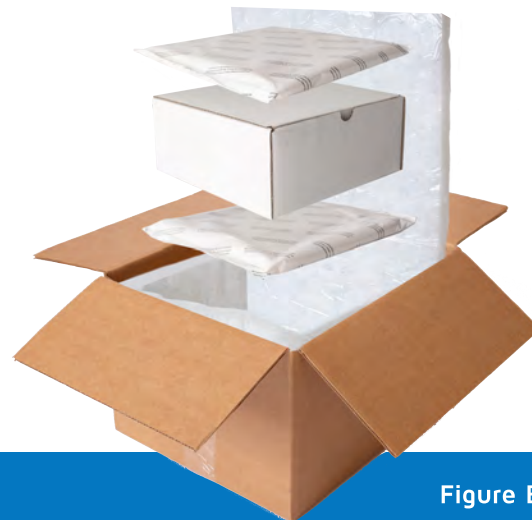


Figure B